INSTALLATION INSTRUCTIONS
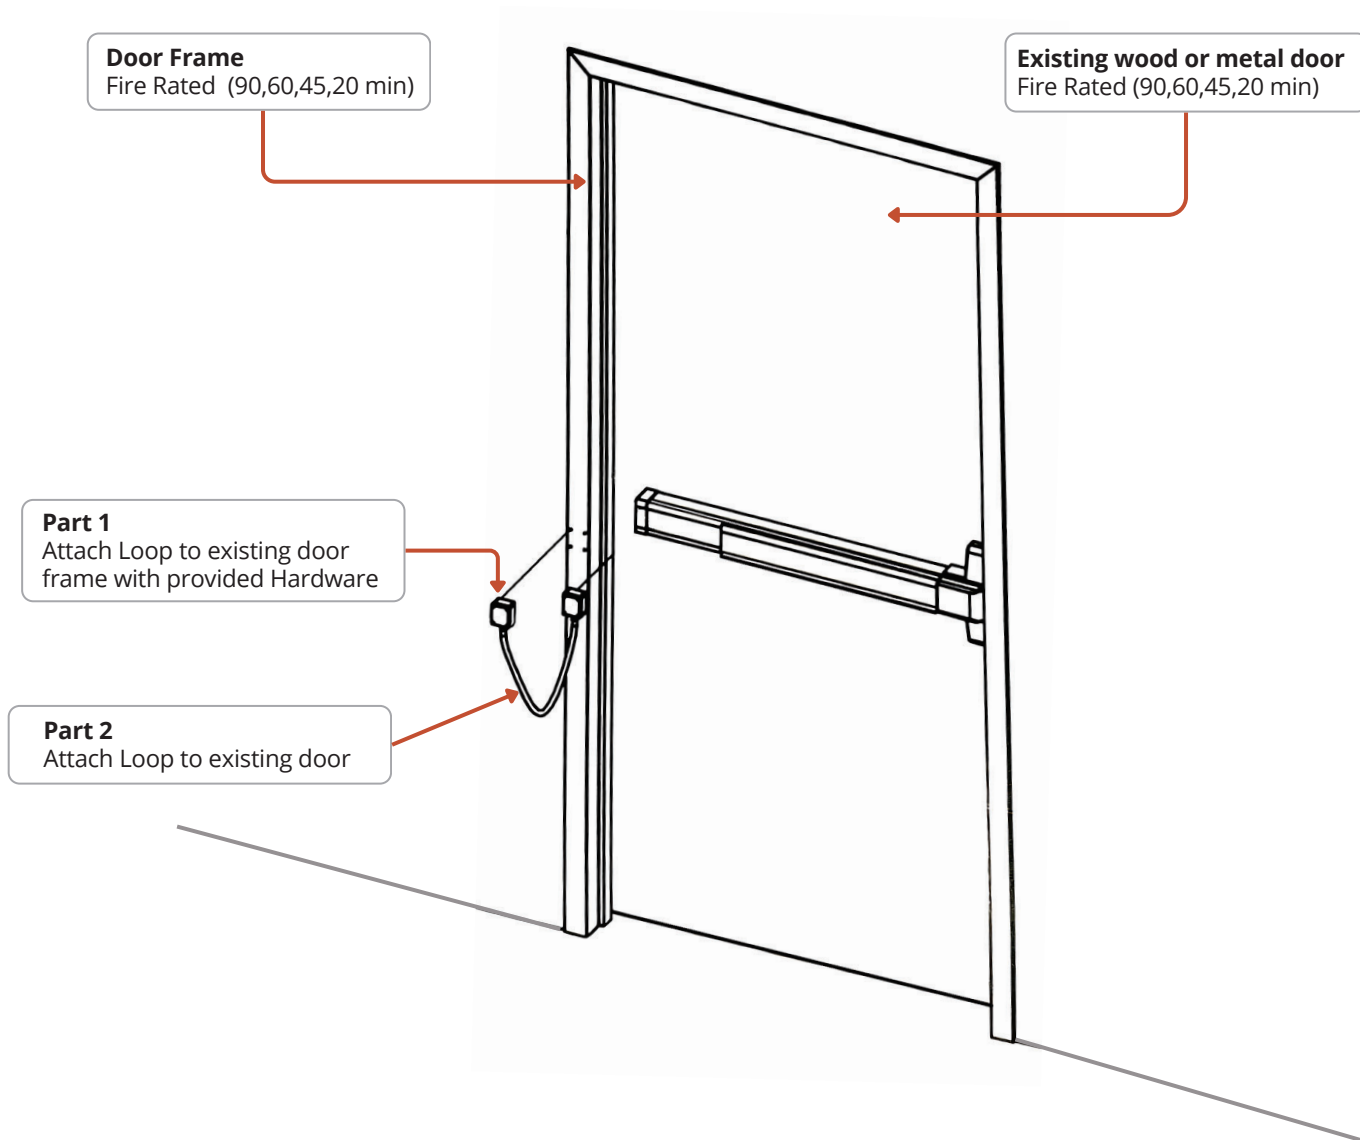## Armored Door Loop

Door Frame
Fire Rated (90,60,45,20 min)

Existing wood or metal door
Fire Rated (90,60,45,20 min)

Part 1
Attach Loop to existing door frame with provided Hardware

Part 2
Attach Loop to existing door

For more info

*This product will meet the requirement of UL 10C (2016), UBC 7-2 (1997), NFPA 252 (2017) and NFPA 80 2010, 2013, 2016, 2019